




Step 1 - Site demarcation

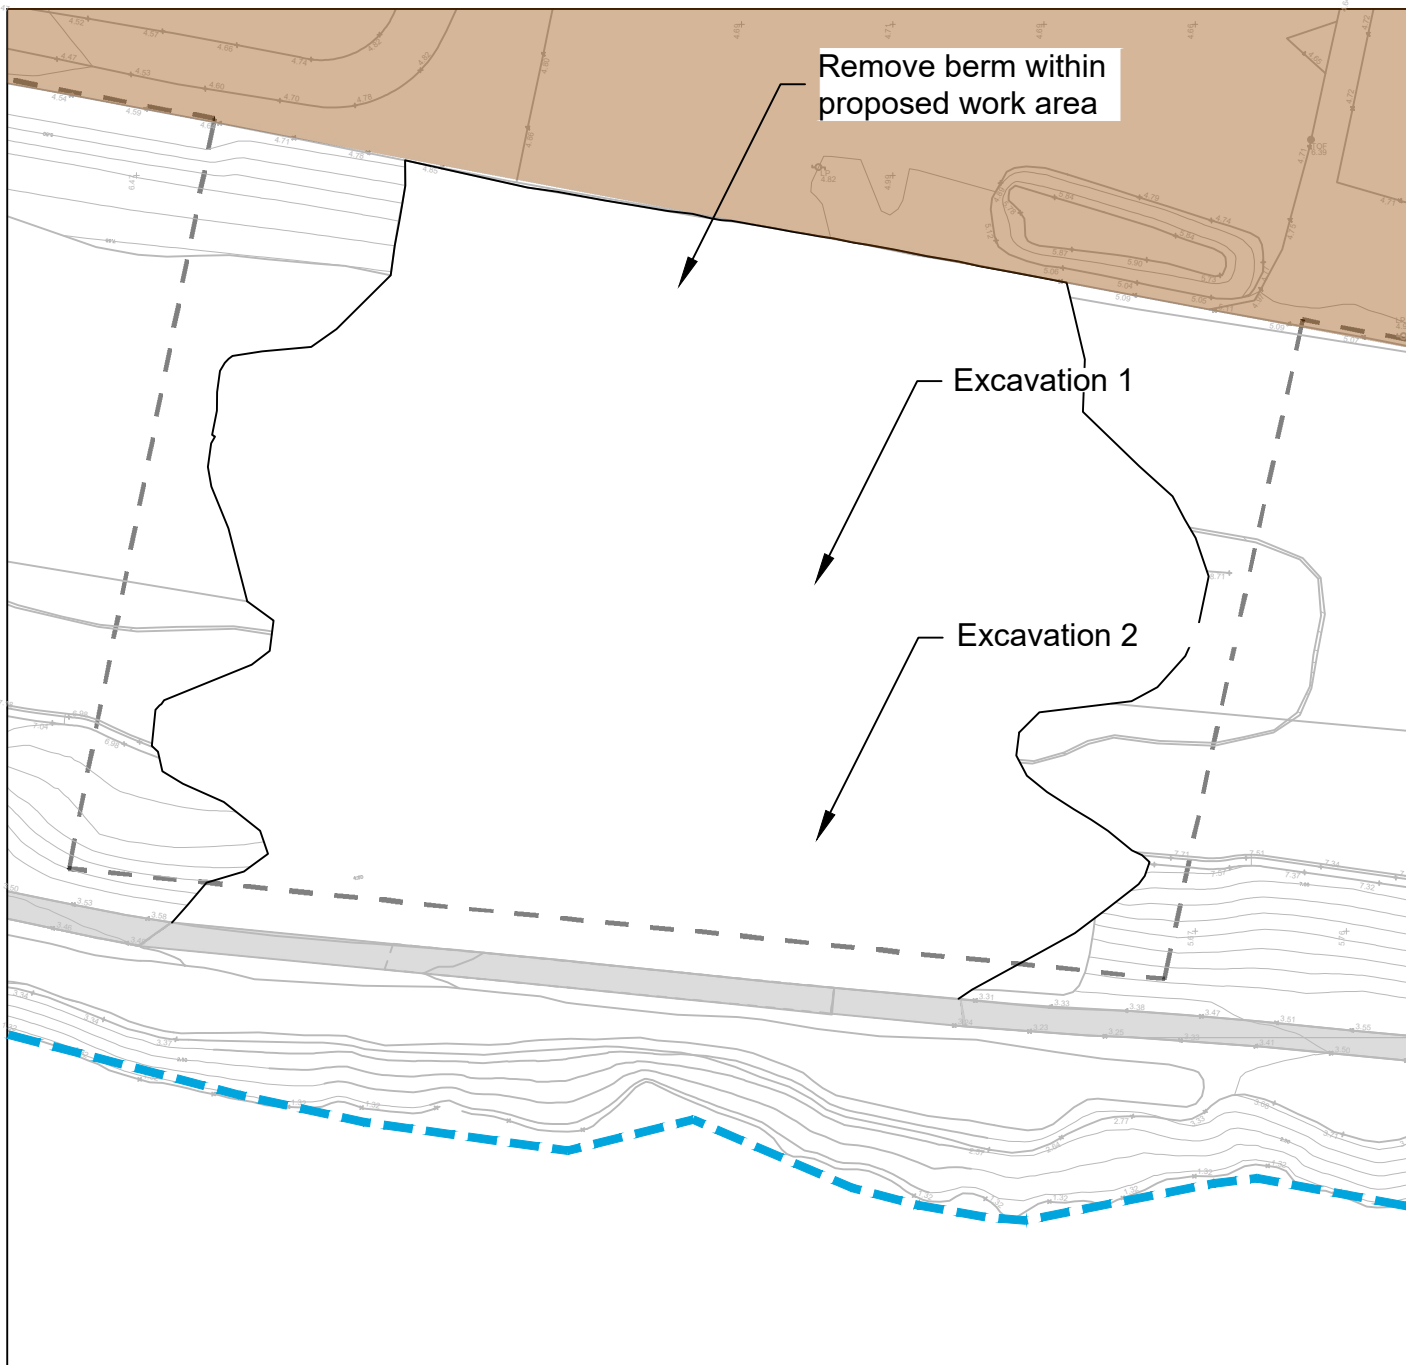


Step 2 - Berm removal

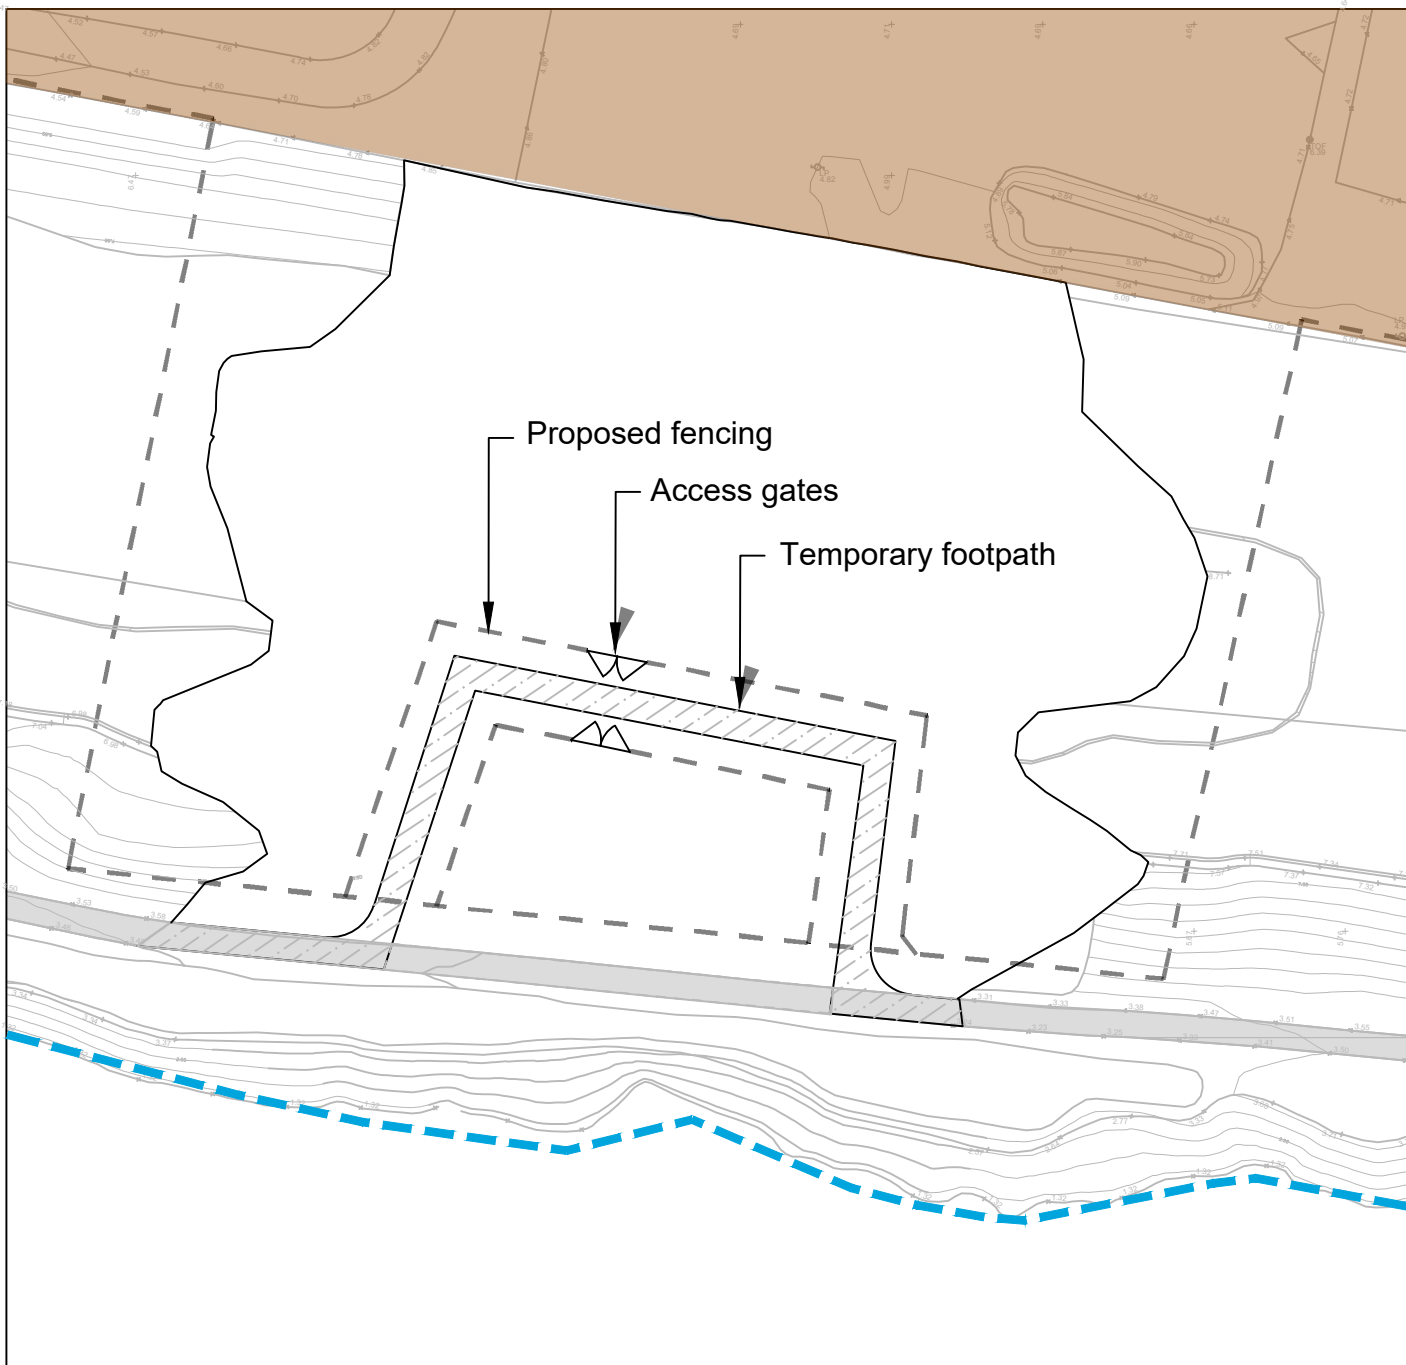


Step 3 - Create temporary footpath and fencing

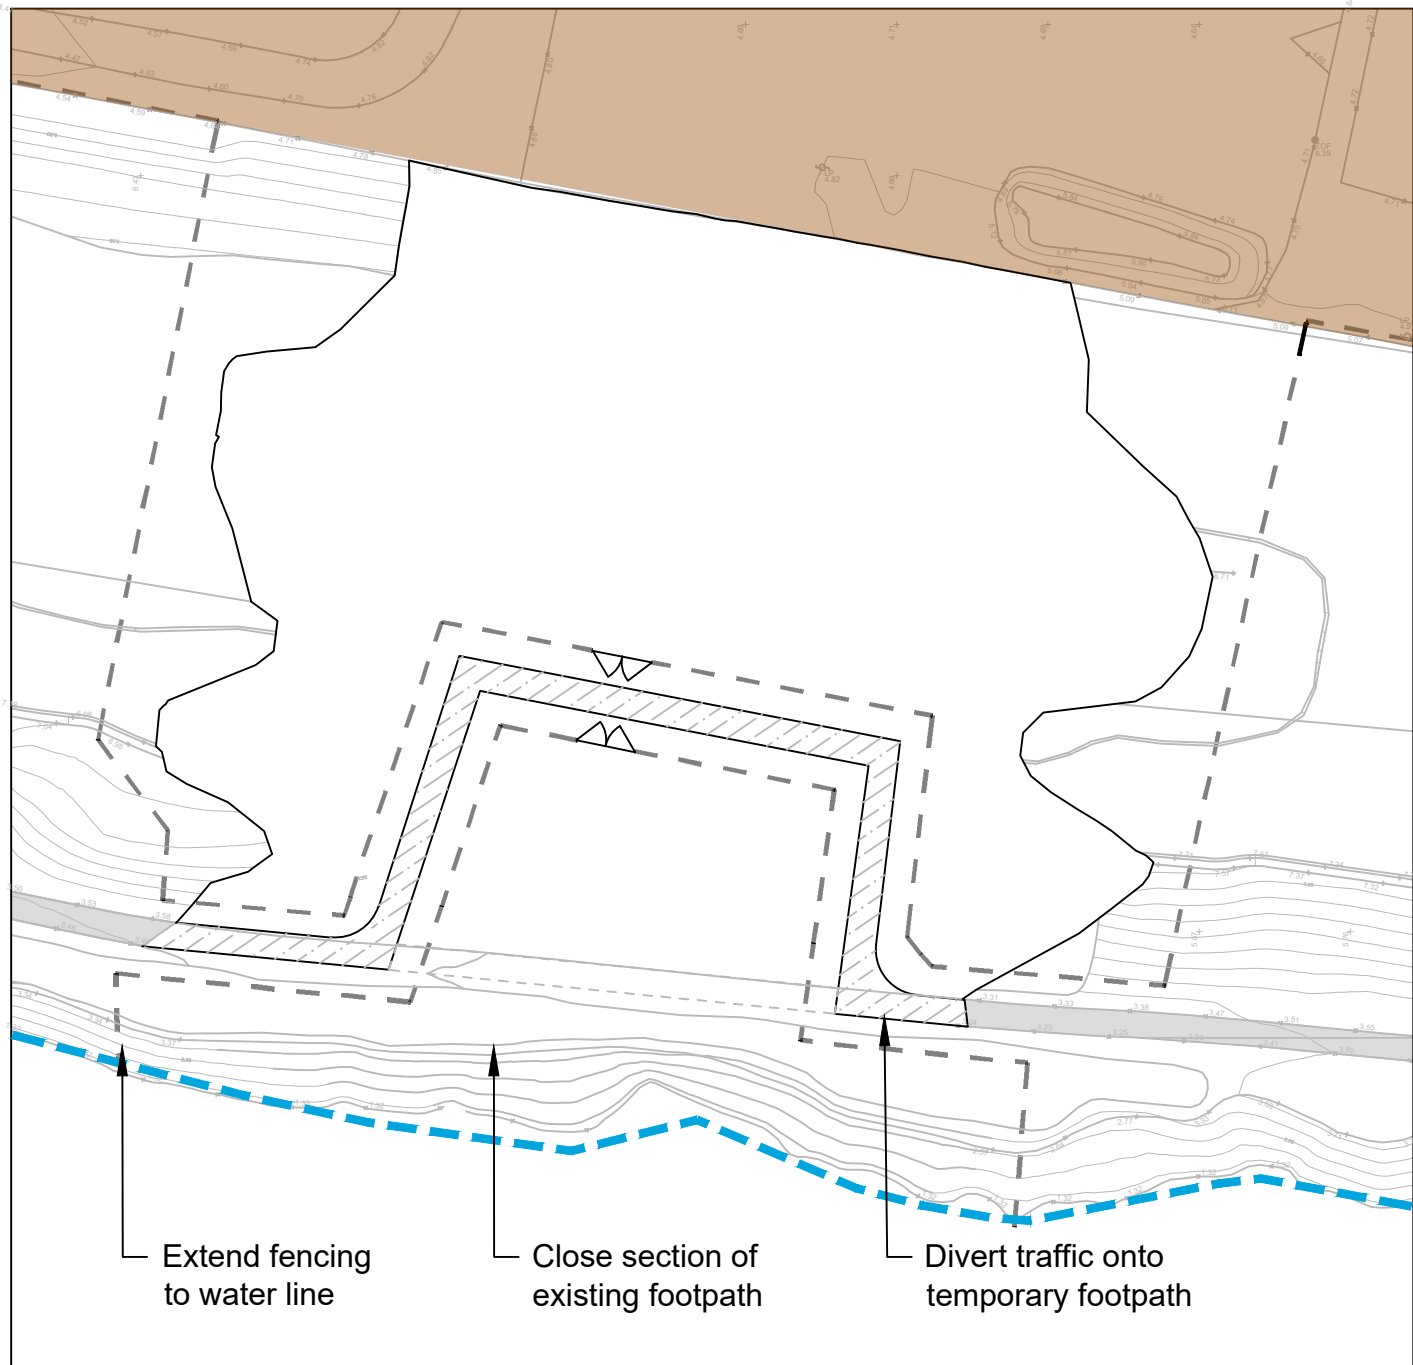

Step 4 - Close and divert onto temporary footpath

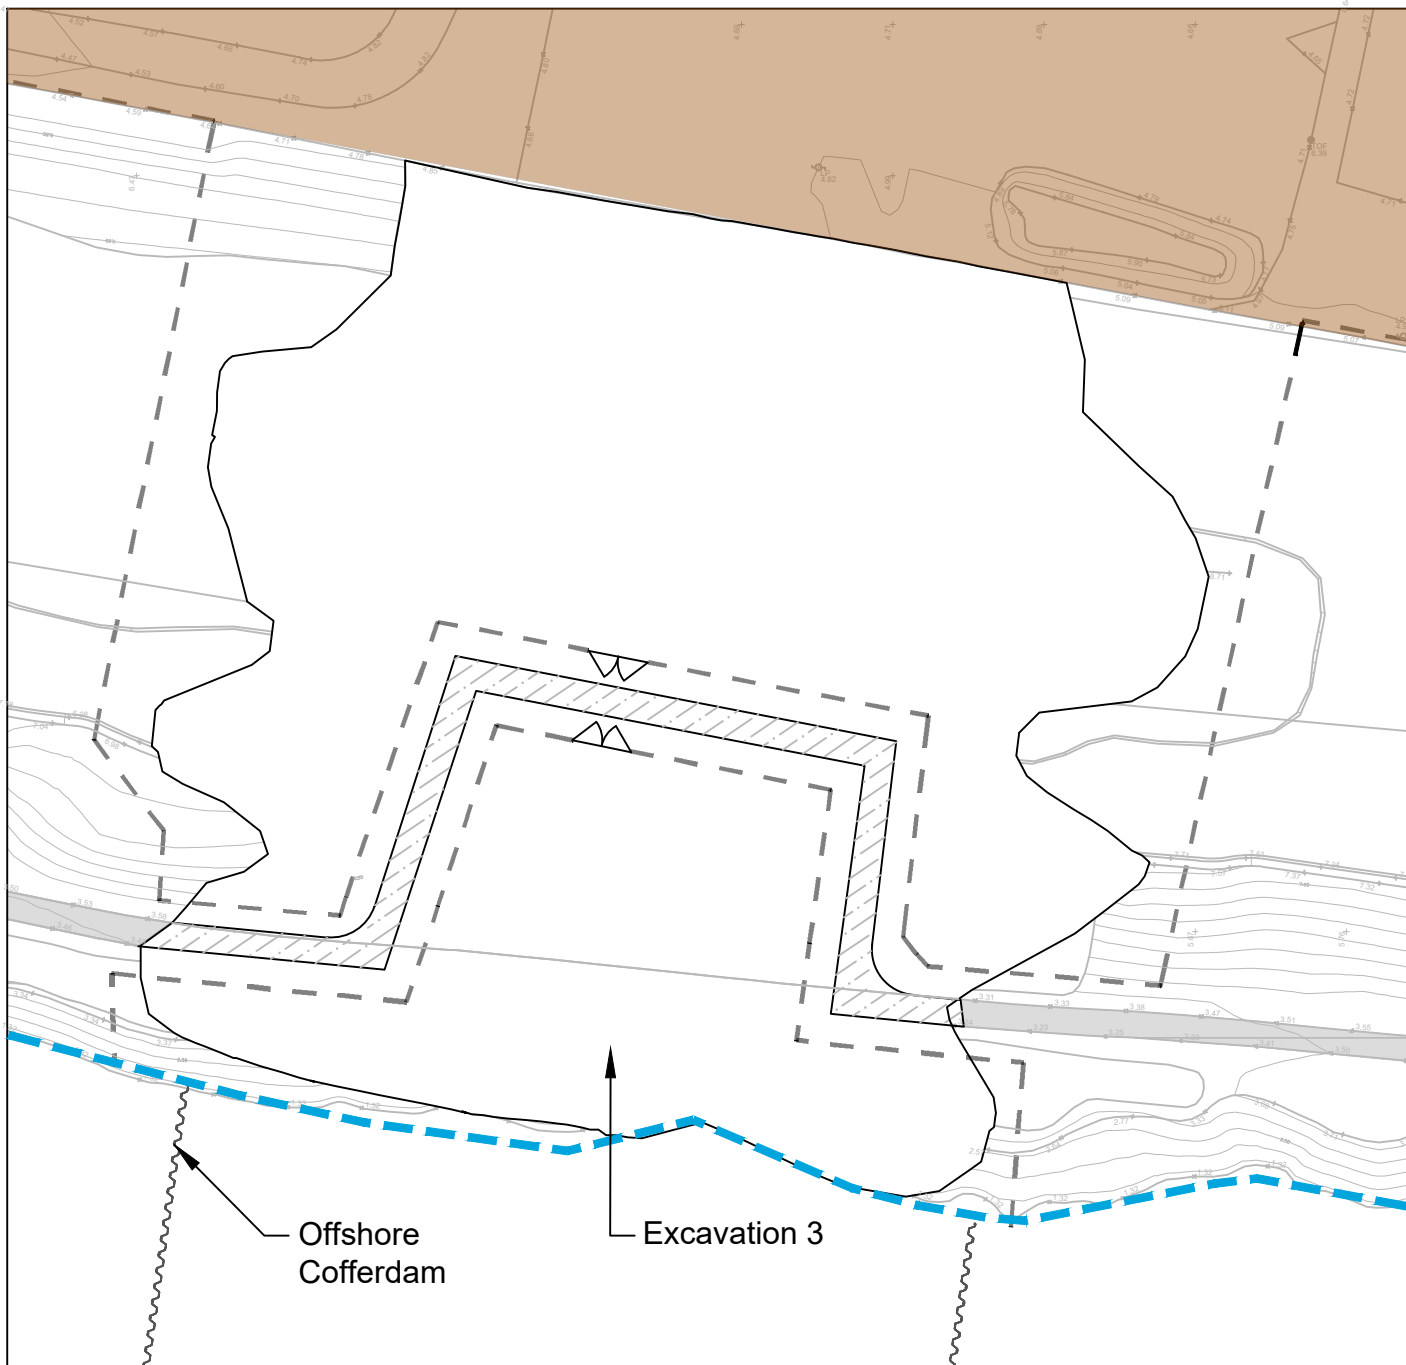

Step 5 - Excavate berm within foreshore area

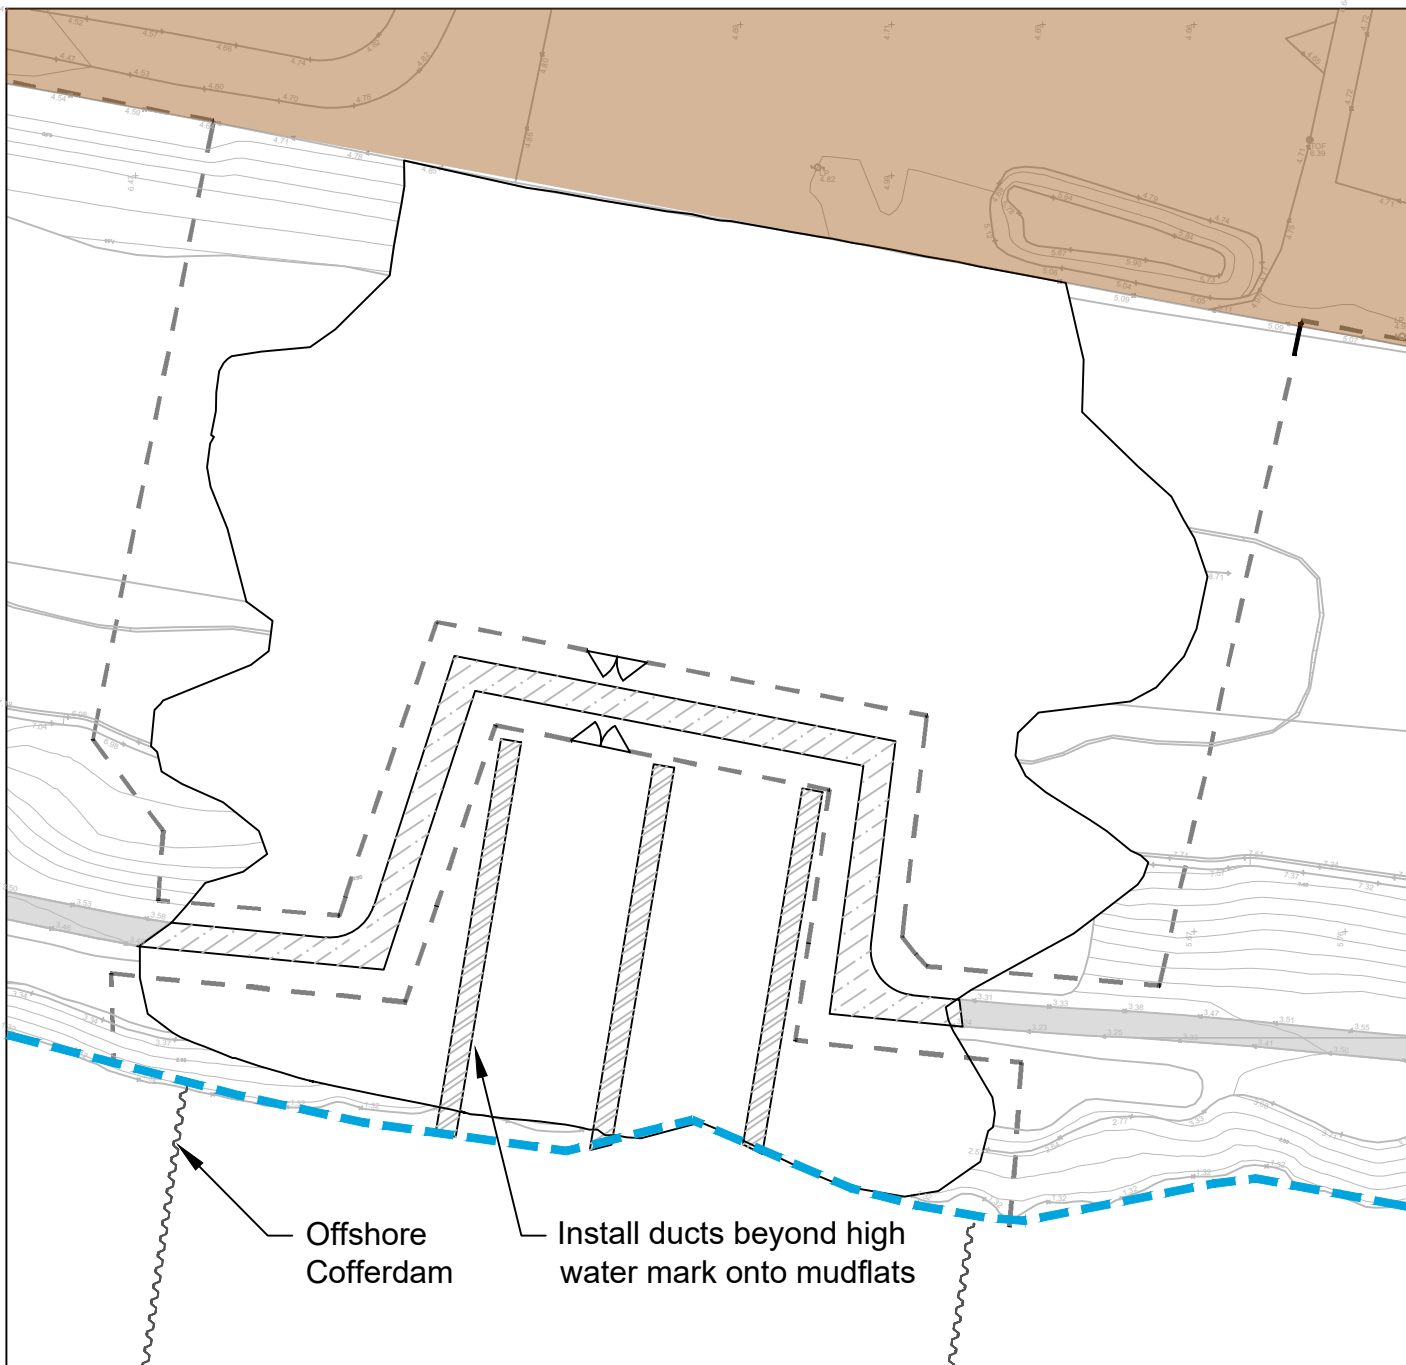

Step 6 - Install ducts within foreshore area


Notes

1. Copyright Licence no: CYAL50378444 © Tailte Éireann – Surveying.
2. Tailte Éireann 1:2,500 Sheet No's: 3264-10, 3264-15, 3265-06 & 3265-11.
3. For planning purposes only – not for construction.
4. All dimensions are in metres.

Key to Symbols

- High Water Mark
- Compound A
- Existing Footpath
- Temporary Footpath
- Footpath to be Closed
- Cable Duct
- Temporary Cofferdam
- Demarcation Fence

Key Plan

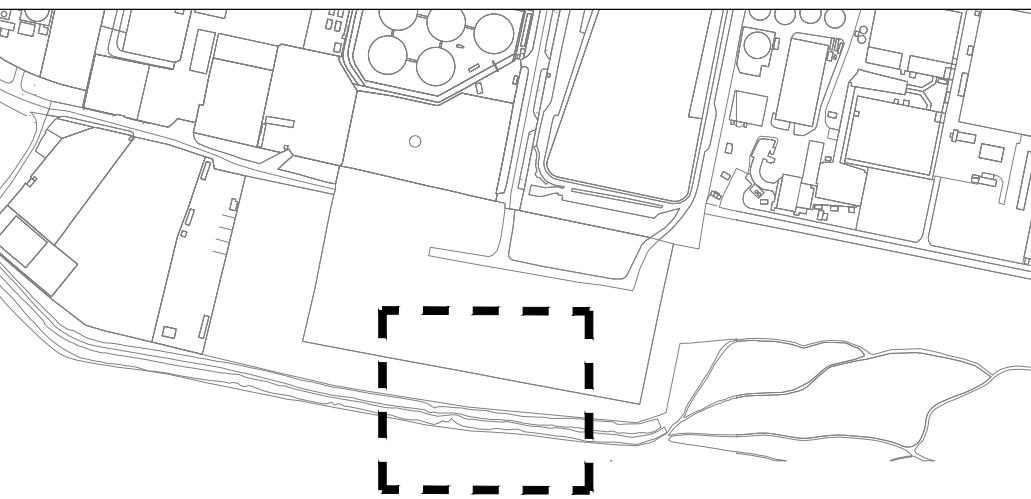

References

A	21/08/24	Planning Issue	MN	MN	DM
Rev	Date	Description	Drawn	Ch'k'd	App'd



Client

CODLING WIND PARK

Title

**LANDFALL DETAILS
CONSTRUCTION SEQUENCE
Sheet 1 of 3**

Scale at A1 1:500	Status Planning	Rev A	Security STD
-----------------------------	---------------------------	-----------------	------------------------

TOBIN Drawing Number
CWP-TOB-CON-08-02-DWG-0017

